

# SHOWER RAIL

Available from  
[www.byretech.com](http://www.byretech.com)

## Chrome Straight Rail Installation.

### Tools required to complete the installation.

- Electric Drill with 6mm masonry drill bit 
- Suitable Hex Screwdriver 
- Masking tape to ensure tiles are not damaged when drilling 
- Steel Pipe cutter or suitable hacksaw 
- Spirit level to get rail level 
- Tape measure 



Suitable for wall to wall installations with a gap not exceeding 2m


## Installation instructions

- Measure up from the **inside base of the bath approximately 190 cm** and make a horizontal line where you would like bracket "a" to be positioned

**(This is so the rail and curtain fit perfectly as shower curtains are normally 180cm drop from shower rail)**

- Fix masking tape to the area where you will fix the first bracket and carefully mark, drill and fix the bracket with the screws and rawplugs supplied.

### Note. You will need an 6mm masonry drill bit to go through your tiles

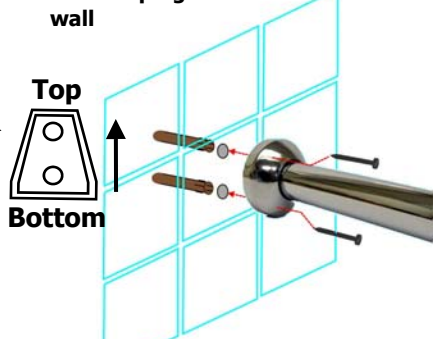- Ensure when you screw the fixing into the wall that the fixing plate is positioned as per the shape opposite. This will allow the chrome fitting to slide on top of the fixing when installed fully. 

- Measure the distance wall to wall between the tiles and cut the rail 10mm short of this measurement with a pipe cutter or hacksaw

**(ie If distance is 1900mm - make the cut at 1890mm. This is so the tube and ends have some adjustment)**


- Slide the chrome cover onto the fixing, insert the rod and mark the position of the next bracket using a pencil on the opposite wall.

- Fix masking tape to the area where you will fix the second bracket and carefully mark and drill the second bracket and insert the rawplugs supplied.


- Fix second bracket with screws into the rawplugs. Now slide free end of tube onto 2nd chrome fixing and lower onto the newly fitted second bracket.

- Your installation is now complete.


- 1.9m approx height from bottom of bath to shower rail

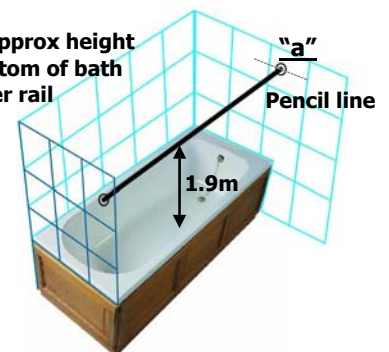

- Tape up area with masking tape
- Mark & drill holes using an 8mm masonry drill
- Add rawplugs & fix bracket to tiled wall

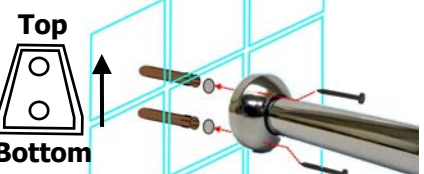

- Ensure rod is level and straight
- Mark new bracket and repeat above procedure then fix rail in place

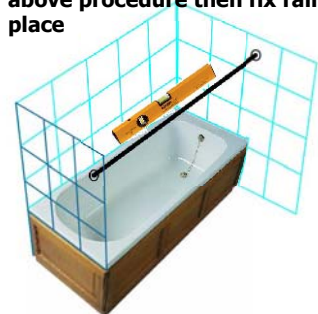

**Byretech Ltd**  
The Bathroom Water Damage Prevention specialists

Byretech Ltd  
Unit 51 Padgets Lane, South Moons Moat,  
Redditch, Worcestershire B98 0RD UK.  
Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111  
E-mail: [info@byretech.com](mailto:info@byretech.com) Web: [www.byretech.com](http://www.byretech.com)