

SHOWER FLOORSEAL

Installation Instructions

Tools required.

- Stanley knife or Scissors
- Sealant gun (not included in kit)
- Fugi Silicone profiler (not included in kit)
- Kitchen roll.
- Methylated Spirits (blue / purple liquid)

Note.....

Shower Floor Seal is designed to form a physical barrier on the wet room floor, to help keep the water in the desired area and not all over your wet room floor.



Step 1. Clean the floor area you wish to fit to with Methylated Spirits to remove any products such as shampoo or conditioner from the floor.

Step 2. Remove the Shower Floor Seal from its packaging and lay it on the wet room floor to decide on the size you need.

Step 3. Cut the profile to the correct size required - re lay it in position on the wet room floor to check it fits properly.

Step 4. Silicone the back of the profile and lay in place on wet room floor. Remove any surplus sealing with the fugi tool.

Step 5. Leave to set for a minimum of 5 hours before using the wet room. Your installation is now complete.

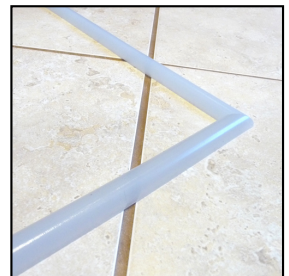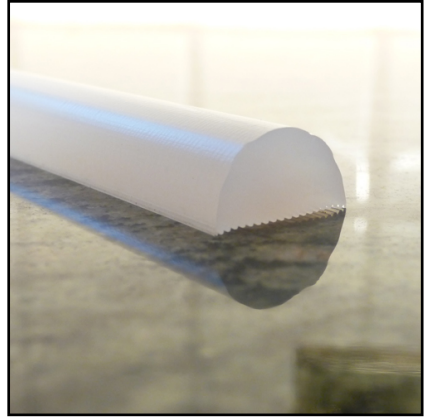

Byretech Ltd - The Bathroom Water Damage Prevention Specialists.

Unit 51 Padgets Lane, south Moons Moat, Redditch, Worcs B98 0RD UK

Tel +44(0) 1527 522522 Fax +44(0) 1527 522111

e mail: info@byretech.com Web: www.byretech.com