

BATH SEAL ULTRA 10








**Guaranteed no mould
For 10 Years**




Suitable for **rectangular** baths
smaller than 2m x 1m
Suitable for **corner** baths
smaller than 2m x 2m

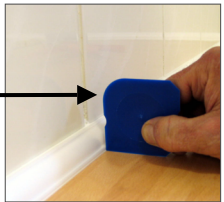

Tools required to complete the installation.


- Stanley Knife or similar 
- **Byretech sealant Removal tool** 
- Tape measure 
- Sealant gun 
- **Fugi II Silicone applicator** 
- Kitchen roll to wipe fingers

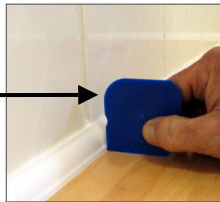• Fugi II and Silicone removal tool available from www.byretech.com



Installation instructions

- Carefully clear away old sealant from bath with **Byretech Silicon Removal Tool**. **Carefully measure length & width of bath as per diagram**
- Transfer measurements to **BathSeal** profiles taking care **not to cut the shaped ends L2 & L3**. The profiled ends fit neatly on to the L1 profile.
- Cut the profiles to length - L1 first and place them onto the bath to check the all fit correctly. L2 & L3 have profiled ends that fit perfectly over L1. Use the cleaning wipe provided to clean the fitment area and also the profile. If your bath is subject to movement you may wish to fill the bath with water now.
- Remove the profiles after checking and take the sealant with the large nozzle and infill the edges of the bath. **It is important that enough sealant is used to completely fill the gaps between the bath and wall.**
- Apply sealant to each corner end of the profiles before fitment. This will ensure no water can sit in the corners of the bath when in use.
- Place the profiles one by one into the wet sealant. Longest profile L1 first.
- **Gently** push the profile into place onto your bath and fit end caps with a small amount of sealant on the end of the profile to hold in place.
- Immediately wipe away with your 90 degree Fugi II tool any excess sealant that has squeezed out from above or below the installed profile. 
- Change the sealant nozzle to the **fine nozzle** and infill carefully the top, bottom edges and corners of the newly installed profile. 
- Once complete, wipe with a Fugi II small curve to smooth the sealant and remove any excess. This operation ensures a complete seal and once done there is no where for the water to sit on the profile.
- Leave for a minimum of 6 hours to cure with water still in the bath and **BathSeal** is ready for use.

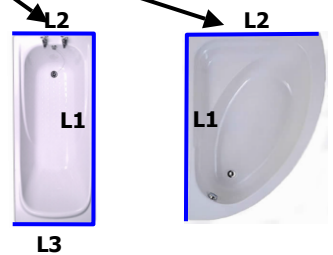

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.