


# Through Bath Bezel Replacement in Stainless Steel

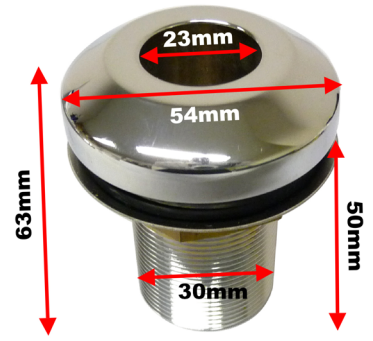

## Installation instructions

- Installations will vary from Bath to Bath, so this is a guideline and not set in stone - If in doubt get a plumber to do this for you.
- Gain access to your existing bezel by removing the bath panel.
- Shut off the water to the bath to avoid any water damage during the work you are about to undertake.
- Remove the old Bezel by typically unscrewing the nut underneath the bath securing it - Typically bathroom companies make this very tough to do for some strange reason.
- Once it is unscrewed and removed measure the hole in your bath.
- The replacement Bezel is 30mm is diameter.
- If your hole is bigger than 38mm then you will have to source a slightly larger washer for your application.
- Clean the New Bezel underside with the alcohol wipe provided.
- Add a small amount of sealant supplied in the kit to the underside of the Bezel ( all the way around ) to secure it to the bath and put in place - Leave to set for 4 hours minimum to cure.
- Add washer and nut and re-tighten gently, holding the Bezel so you don't break the silicon seal you have just created.
- Feed shower hose through bath and reconnect under bath.
- Note this replacement is designed to fit Byretech Shower Hoses BH33 and BH34. These hoses seat neatly in the bezel and stop water going down the bezel when the hose is in place.
- Take care not to use this shower as an Overhead Shower as water will run down the hose and cause water damage under bath over time.
- This is for hair washing and bath cleaning only - NOT showering.



**Note - Hose and Shower Head  
NOT provided in this kit**

