

SHOWER RAIL

Available on-line
from
www.byretech.com


Quadrant Rail Installation Guide.

Tools required to complete the installation.

- Electric Drill with 7mm masonry drill bit
- Suitable Hex Screwdriver
- Masking tape to ensure tiles are not damaged when drilling
- Stainless Steel Pipe cutter or suitable hacksaw
- Spirit level to get rail level
- Tape measure






Suitable for
Quadrant Shower
Trays not exceeding
900mm x 900mm

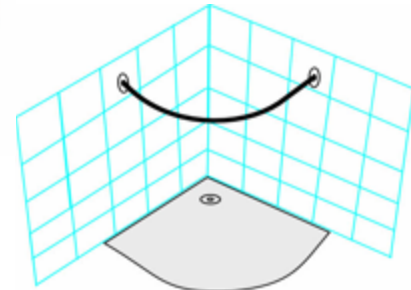

Installation instructions

- When fitting this Shower Rail above a **Quadrant Shower Tray**, it's important that the shower curtain **does not** touch the bottom of the tray when fitted. This is to prevent black mould forming on the curtain.
- Assemble the Rail, Hooks & Curtain onto the rail and then hold the rail above the tray in the place the rail will sit on the wall. Now ensure you have around a 1cm to 2cm gap between the curtain and the trays floor.
- Make a pencil line on the wall under the bracket, so you know how high to mount the shower rail on your wall. See Diagram 1.
- Cut the shower rail at each end to mirror the size of your shower tray (If required) – **TIP** – It's wise to make the rail **5-10cm shorter than the size of your tray**, so the curtain hangs on the inside of the tray and not on the lip. This will help keep the water in your tray, rather than on the floor.
- Assemble the brackets on to the rail at the required height and draw a pencil mark around the brackets ensuring the rail is level and at the correct height.
- Dis-assemble the wall bracket and hold the wall plate to the wall and mark the two screw holes with a pencil.
- Cover the area with Masking tape, drill and rawplug using a **7mm** masonry bit.
- Now attach the back plates to the wall, slide the swivel arms onto the ends of the shower rail and fix in place with the top and bottom screws on each bracket.
- Fit the rail fully and supporting it with one hand, tighten the grub screws on the brackets to complete the installation with the allen key provided.
- **Note ! The Quadrant Shower Rail with a curtain, will not guarantee water stays in the tray and with this type of installation it is to be expected that water may / will flow onto your bathroom floor.**
- **Byretech Recommend Heavy Duty Shower Curtains and Roller Ball Rings for this type of installation.**

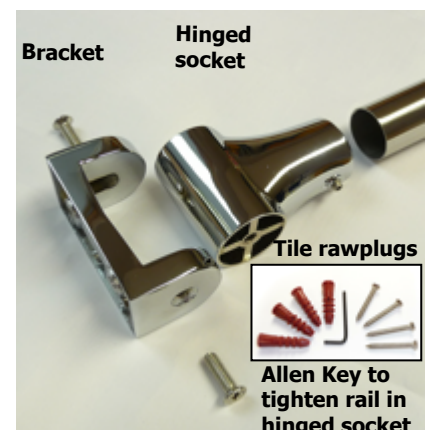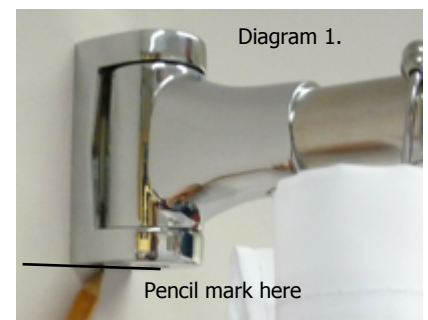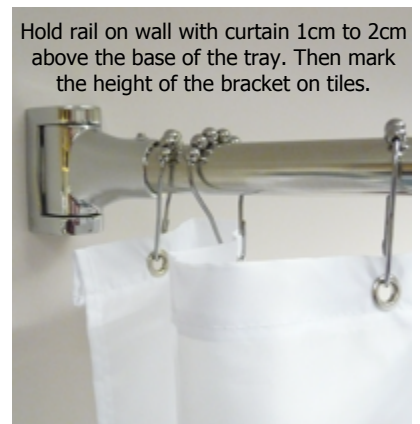

Byretech Ltd
The Bathroom Water Damage Prevention specialists

Byretech Ltd
Unit 51 Padgets Lane, South Moons Moat,
Redditch, Worcestershire B98 0RD UK.
Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111
E-mail: info@byretech.com Web: www.byretech.com