


Screen Seal Ultra from Byretech - Stops annoying leaks



SCREENSEAL! Ultra

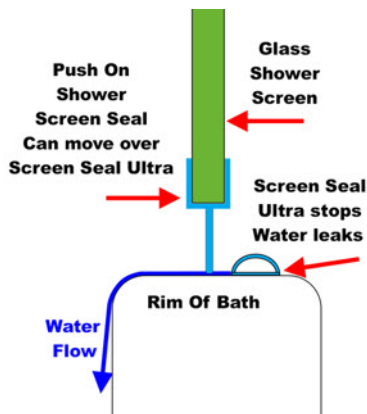

Tools required

- Scissors
- Fugi Tool
- Kitchen roll to wipe rim of bath


Suitable for all bath screens with a maximum length of 1.0m

General Information.

Screen Seal Ultra is designed to work with all Glass Bath Screens and **self-adheres** on to the rim of your bath.

- Step 1. Cut the seal to the same length as your entire screen (wall to end of screen).
- Step 2. Pre-Clean the rim of the bath with your normal bathroom cleaning product so its 100% clean.
- Step 3. Using the alcohol wipe provided, clean the rim of the bath where the seal is to be fitted.
- Step 4. Starting at the wall end remove the red backing and fit the seal so it touches the tiled wall and sits outside of the existing seal on the rim of the bath.

NOTE - The seal can not be re-positioned once fitted.

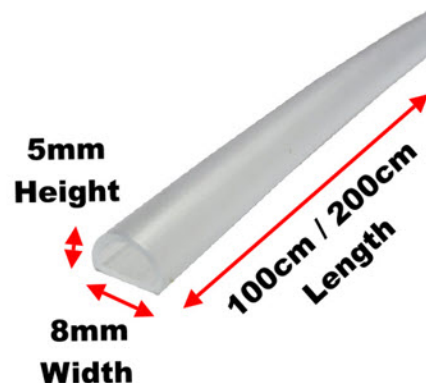

Byretech Ltd
The Bathroom Water Damage Prevention specialists

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.

Byretech Ltd
Unit 51 Padgets Lane, South Moons Moat,
Redditch, Worcestershire B98 0RD UK.
Phone: +44 (0) 1527 522 522 Fax: +44 (0) 1527 522 111
E-mail: info@byretech.com Web: www.byretech.com