

BATH SEAL ULTRA 10




**Guaranteed no mould
For 10 Years**



Tools required to complete the installation.

- Stanley Knife or similar
- **Byretech sealant Removal tool**
- Tape measure
- Sealant gun
- **Fugii II Silicone applicator**
- Kitchen roll to wipe fingers

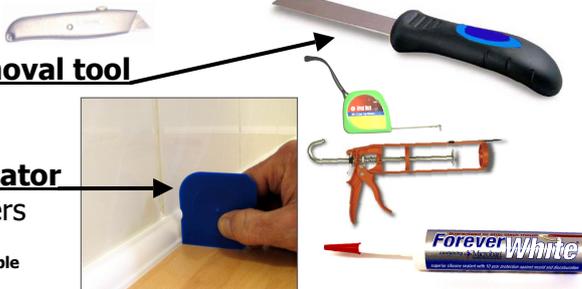


• Fugii II and Silicone removal tool available from www.byretech.com

Part Numbers

1 x Vertical Seal BVSWK01
2 x Vertical Seals BVSWK02

Installation instructions - BathSeal Ultra 10 Vertical Seal

- First install your **BathSeal Ultra 10** Seal on your bath.
- The **Vertical** seal may be added, only after the **BathSeal** has been fitted.
- Measure the height from your new **BathSeal** to the ceiling or where you would like the seal to end vertically on your wall, then cut the profile to length.
- If required remove any sealant or protruding grout that will stop the seal fitting flush on to the tiled wall.
- Clean the corner area with Methylated spirits (Meths), to ensure adhesion.
- Apply sealant to the scribed (see diagram 1) end of the profile before fitment, and a thick vertical bead in the corner of the shower to the height required.

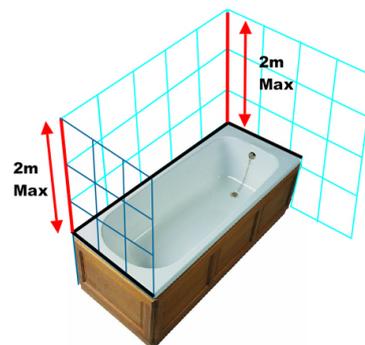

It is important that enough sealant is used to provide a good seal between the two tiled walls / boards.

- Place the profile onto the wet sealant and **Gently** push the profile into place so it sits neatly on the existing **BathSeal**. (See Diag 2)
- Immediately wipe away with your Fugii III tool, any excess sealant that has squeezed out from either side of the newly installed profile.
- Change the sealant nozzle to the **fine nozzle** and infill carefully the edges of the newly installed profile. Remove excess with a **Fugii III** tool to smoothe the sealant. (Complete length of profile both sides)



Finally seal in with the sealant provided and its complete !

This operation ensures a complete seal and once done there is no where for the water to sit on the profile.



Fugii III

- Add the end cap (if required) using a blob of silicone sealant.
- Leave for a minimum of four hours to cure and **BathSeal** vertical seal is ready for use.

