




# SHOWER 3 3 ULTRA 10 SEAL



**Guaranteed no mould  
For 10 Years**



## Tools required to complete the installation.

- Stanley Knife or similar 
- **Byretech sealant Removal tool** 
- Tape measure
- Sealant gun
- **Fugi II Silicone applicator** 
- Kitchen roll to wipe Fugi III

• Fugi III and Silicone removal tool available from [www.byretech.com](http://www.byretech.com)

**Variants Available**  
1m x 1m  
1.25m x 1.25m  
2m x 1m  
Depending on how large your tray is.

## Installation instructions

• Clear away old sealant from shower tray with knife and scraper and carefully measure internals of tray as per diagram opposite. Use Meths (Methylated Spirit - Blue Liquid) to clean the tray / tiles and the wipes the ShowerSeal profile once they are cut to size. **DO NOT USE WHITE SPIRIT**

• Transfer the trays 3 internal measurements to **ShowerSeal** profiles taking care **not to cut the pre-shaped ends**.

• Cut L2 first and fit at back of shower tray (non profiled piece) cut the other 2 profiles L1 / L3 to length and place them inside the shower tray Left and right to check they fit OK. They will fit over L2 if measured correctly.

• Remove the profiles and take the sealant with the **large nozzle** and infill the edges of the tray with sealant. It is important that enough sealant is used to completely fill the gaps between the tray and wall.

• Apply sealant to each end of the profiles before fitment. This will ensure no water can sit in the corners of the tray when in use.

• Place the profiles one by one into the wet sealant.



• **Gently** push the profile into place onto your shower tray.

• Immediately wipe away with the Fugi tool's 90 degree edge any excess sealant that has squeezed out from above or below the profile - see video.

• Change the coarse sealant nozzle to the **fine nozzle** and infill carefully the top and bottom edges and corners of the newly installed profile.

• Once complete, remove any excess sealant with the small radius on the Fugi tool. This operation ensures a complete seal and once done there is no where for the water to sit on the profile - see video on website.

• Leave for 6 hours minimum and **ShowerSeal 3 Sides** is ready for use.

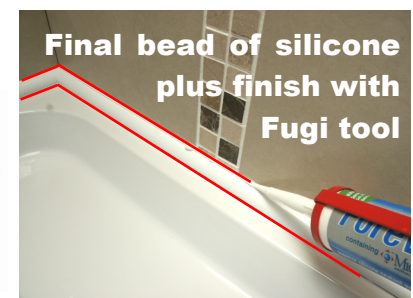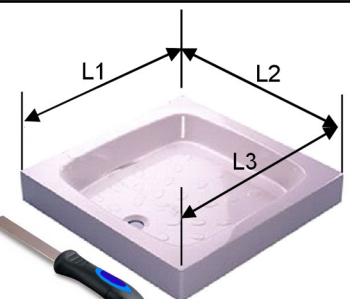

Note. Byretech recommends that all black mould in the bathroom is removed prior to fitting its products.